


### 4. Speedometer Cable

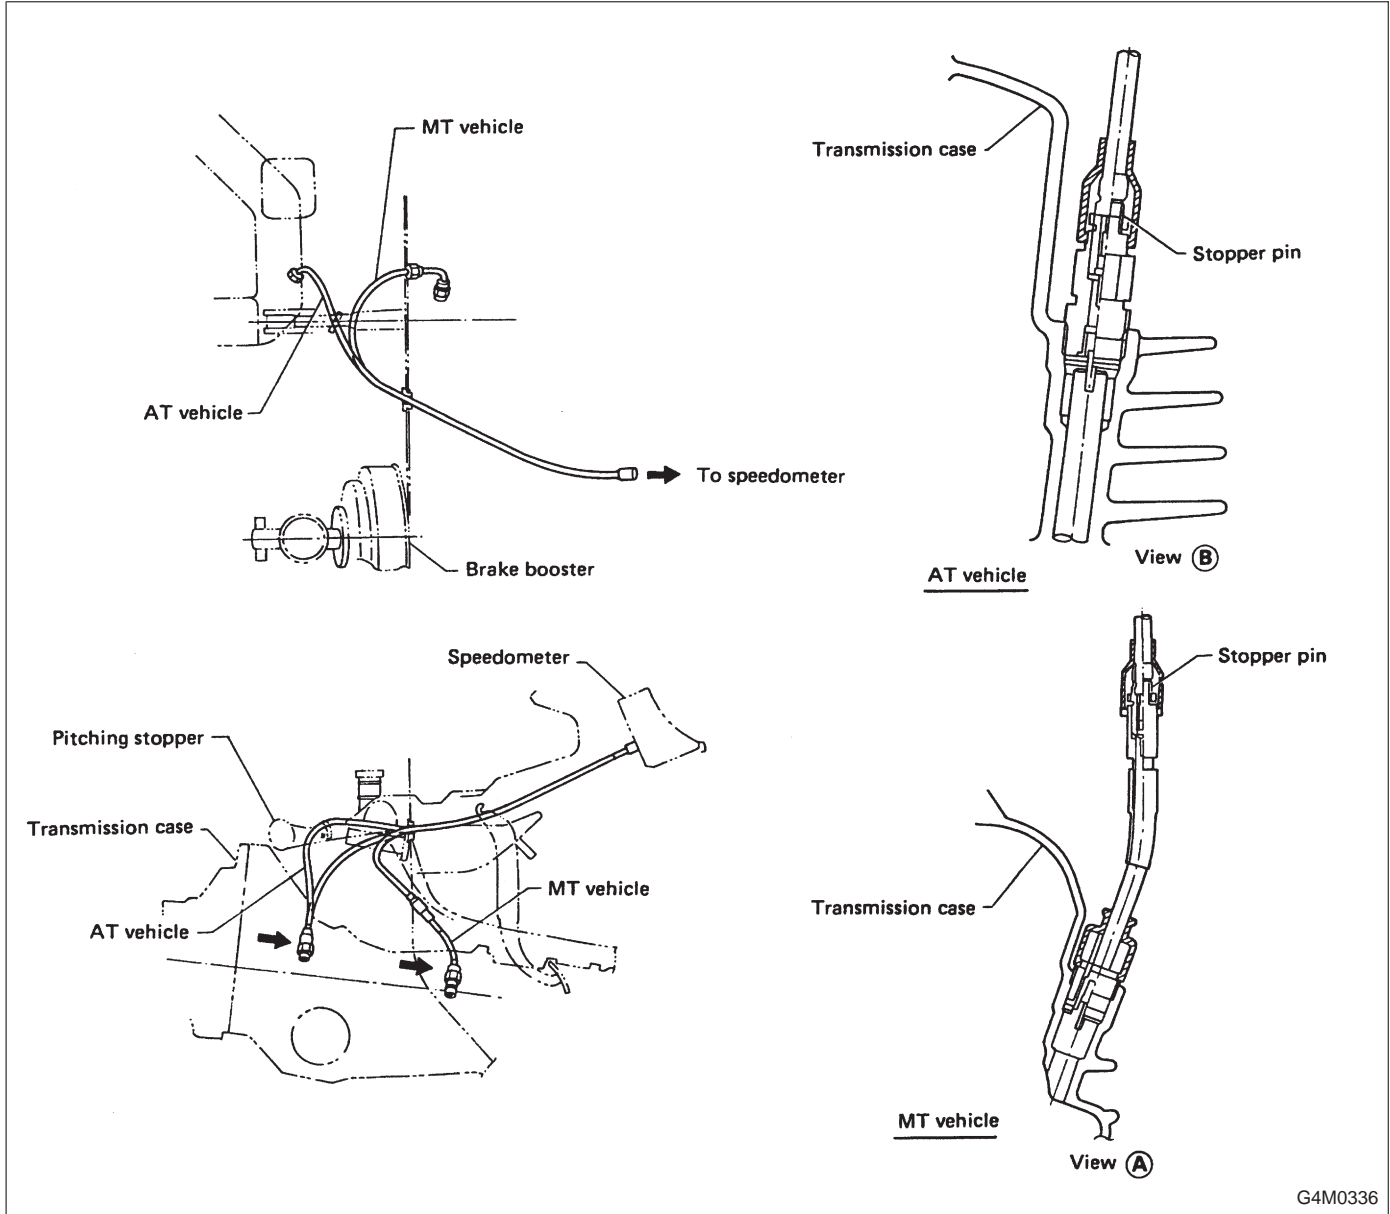

G4M0336

**A: REMOVAL**

- 1) Remove speedometer cable, starting with its midpoint connection inside engine compartment.
- 2) While holding up boot located at speedometer cable connection, slightly expand clip. Extract speedometer cable by pulling it upward 2 to 3 mm (0.08 to 0.12 in) on speedometer side. Then, release clip and remove speedometer cable.
- 3) After disconnecting cable from speedometer, pull it out of toe board.
- 4) Remove screw which secures speedometer cable to transmission side.

**B: INSTALLATION**

- 1) After manually screwing speedometer cable on transmission side, tighten it 45 to 90° using a wrench.
- 2) Securely install boot onto midpoint connection of speedometer cable to prevent entry of water.