**NOTE:**

Whenever turning adjust nut, prevent PHV cable from revolving as shown in Figure.


## 9. Parking Brake Lever

### A: REPLACEMENT

- 1) Remove console box from front floor.
- 2) Disconnect electric connector for parking brake switch.
- 3) Loosen parking brake adjuster, and remove inner cable end from equalizer.
- 4) Remove parking brake lever.
- 5) Install parking brake lever in the reverse order of removal.

**Torque (Lever installing bolt):**

**$18\pm 5 \text{ N}\cdot\text{m}$  ( $1.8\pm 0.5 \text{ kg}\cdot\text{m}$ ,  $13.0\pm 3.6 \text{ ft}\cdot\text{lb}$ )**

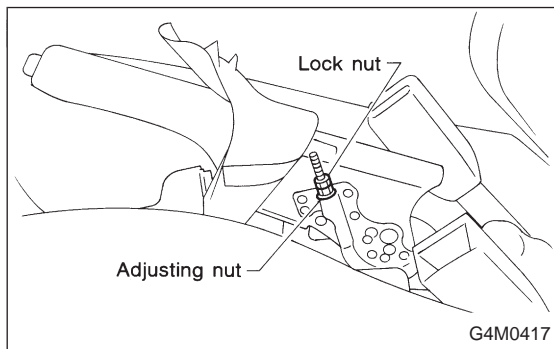

- 6) Adjust parking brake lever by turning adjuster until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kg, 44 lb).
- 7) Tighten lock nut.

**Torque (Adjuster lock nut):**

**$5.9\pm 1.5 \text{ N}\cdot\text{m}$  ( $0.60\pm 0.15 \text{ kg}\cdot\text{m}$ ,  $4.3\pm 1.1 \text{ ft}\cdot\text{lb}$ )**