

4. Sealing Cover

A: REMOVAL

- 1) Remove trim panel.
- 2) Remove speaker, trim bracket and remote assembly and disconnect connectors.
- 3) Remove sealer with a spatula.

CAUTION:

Be careful because cover may break if sealer is removed forcefully.

B: INSTALLATION


- 1) Confirm that sealer is properly applied without breaks. Then install sealing cover.
- 2) When repairing or replacing sealing cover, use "CEMEDINE 5430L" as sealer. It may be overlaid on existing sealer.

Sealer:

CEMEDINE 5430L

CAUTION:

Any breaks in sealer can cause water leakage or entry of air and dust. Be sure sealer is applied in a continuous line.

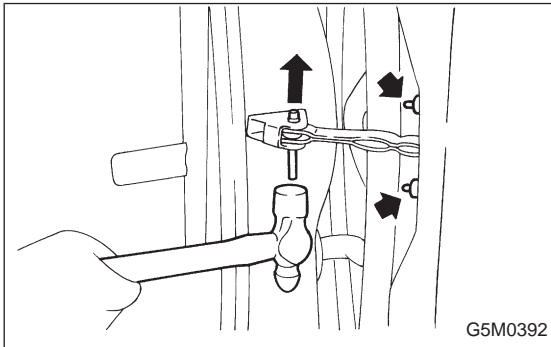

5. Checker

A: REMOVAL AND INSTALLATION

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Apply a cloth to door and body to prevent damaging them, and remove checker pin by driving it upward.

CAUTION:

Be careful not to damage door and body.

- 4) Completely close door glass.
- 5) Loosen two nuts securing checker, and take out checker through access hole in underside.

Installation should be made in the reverse order of removal.

Tightening torque:

5.4 — 9.3 N·m (0.55 — 0.95 kg·m, 4.0 — 6.9 ft·lb)