

8. Combination Meter

A: REMOVAL AND INSTALLATION


- 1) Move steering wheel down.
- 2) Remove screws which secure visor and remove visor.
- 3) Disconnect switch connectors.

- 4) Remove screws which secure combination meter, and pull combination meter out.
- 5) Disconnect connector and speedometer cable from back of combination meter.

CAUTION:

When installing combination meter, be sure to connect speedometer cable and connectors to backside of combination meter.

B: BULB REPLACEMENT

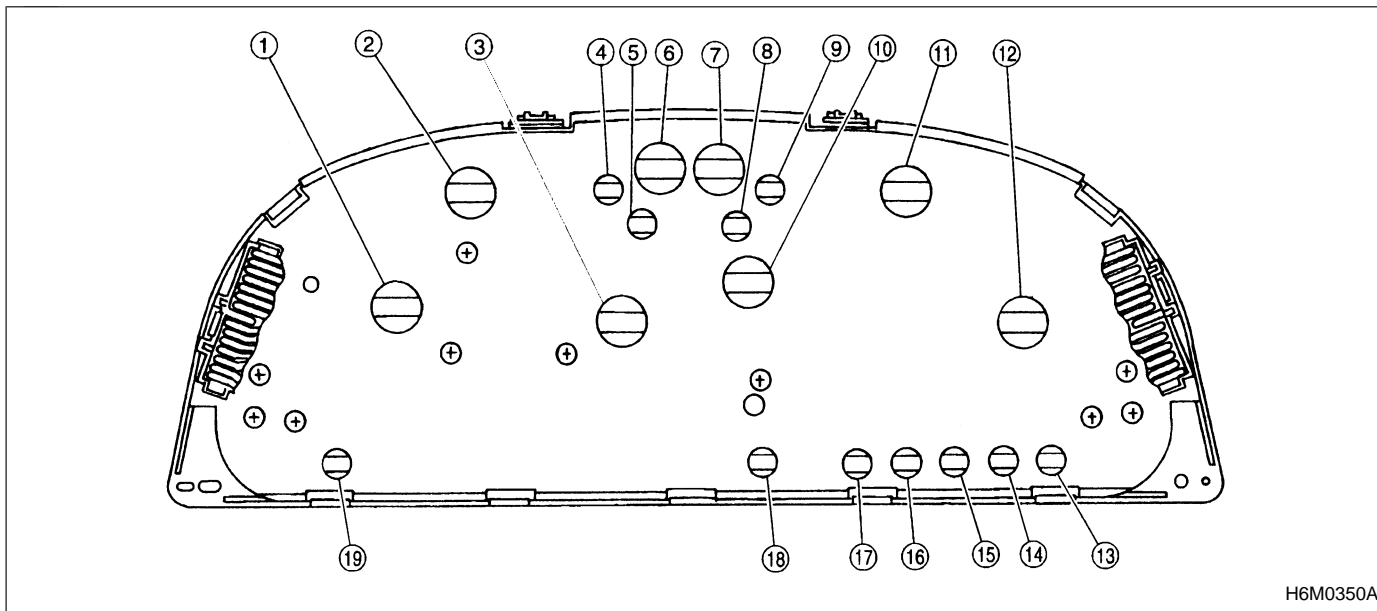

- ① Speedometer and fuel gauge
- ② Speedometer
- ③ Speedometer and AT indicator
- ④ Turn RH
- ⑤ Door open
- ⑥ Hi-beam
- ⑦ Brake

- ⑧ Seat belt
- ⑨ Turn LH
- ⑩ Tachometer and AT indicator
- ⑪ Tachometer
- ⑫ Tachometer and temperature gauge
- ⑬ Check engine

- ⑭ Charge
- ⑮ Oil pressure
- ⑯ AT oil temp.
- ⑰ A.B.S.
- ⑱ Rear defogger
- ⑲ FWD