



5. Radiator Fan and Fan Motor

A: REMOVAL


- 1) Disconnect ground cable from battery terminal.
- 2) Disconnect connector from fan motor.

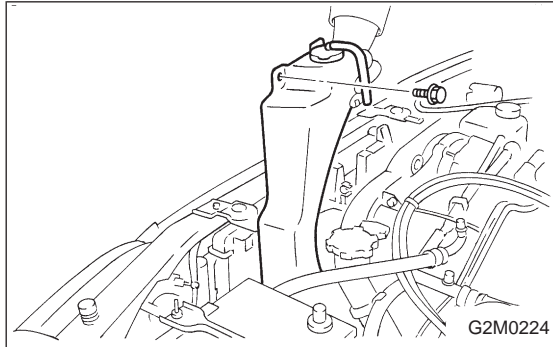

- 3) Remove reservoir tank.

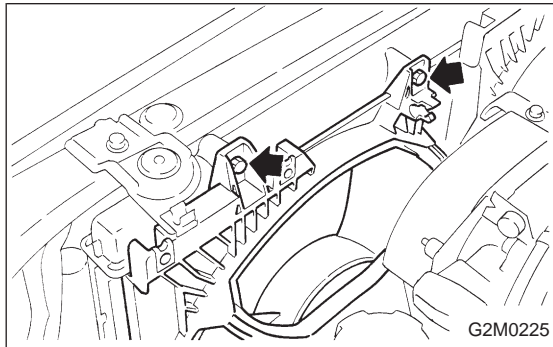

- 4) Remove two bolts holding shroud to radiator upper side.

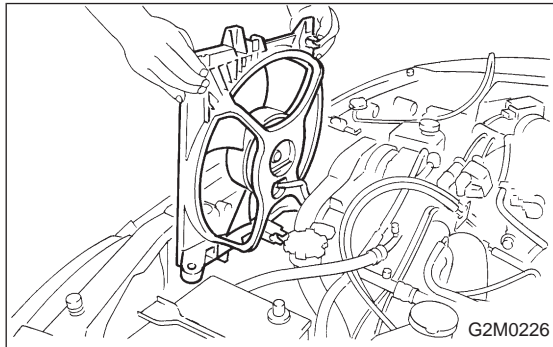

- 5) Remove radiator fan motor assembly.
- 6) Remove fan motor from shroud.

B: INSTALLATION

Installation is in the reverse order of removal procedures. Observe the following:

- 1) Before installing radiator fan motor, apply a coat of sealant to threads and tighten nuts.
- 2) Make sure radiator fan does not come into contact with shroud when installed.
- 3) After installation, make sure there is no unusual noise or vibration when fan is rotated.