



2. CALIFORNIA FWD MODEL

- 1) Lift up the vehicle.
- 2) Disconnect evaporation hoses from canister.

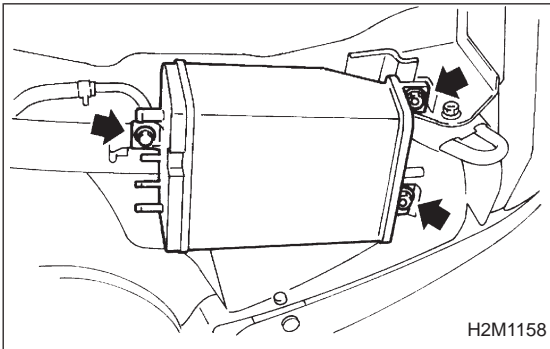


- 3) Remove canister from body.
- 4) Installation is in the reverse order of removal.

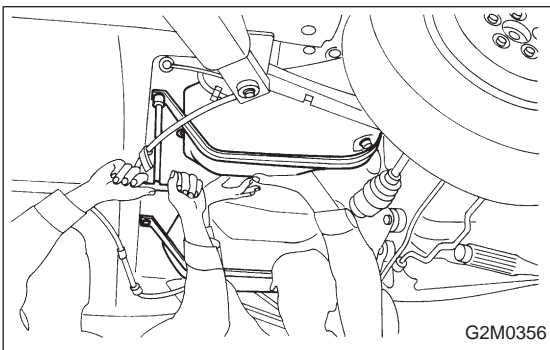

11. Fuel Cut Valve (AWD and California FWD model)

A: REMOVAL AND INSTALLATION

- 1) Remove fuel tank. <Ref. to 2-8 [W3A0].>

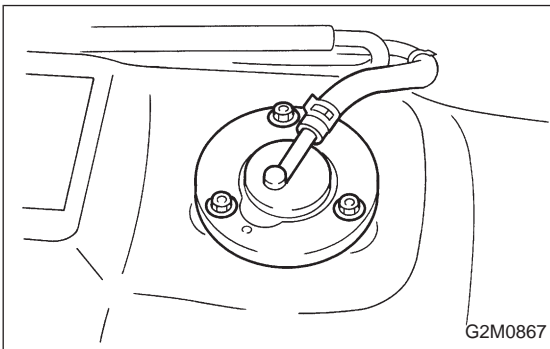

- 2) Disconnect evaporation hose from fuel cut valve.
- 3) Remove fuel cut valve.
- 4) Installation is in the reverse order of removal procedure.

Tightening torque:

4.4±1.5 N·m (0.45±0.15 kg-m, 3.3±1.1 ft-lb)