

13. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Remove bolt which installs purge control solenoid valve onto intake manifold.

NOTE:

This figure shows the intake manifold detached from the cylinder heads.


2) Take out purge control solenoid valve through the bottom of the intake manifold.

3) Disconnect connector and hoses from purge control solenoid valve.

4) Installation is in the reverse order of removal.

Tightening torque:

$16 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

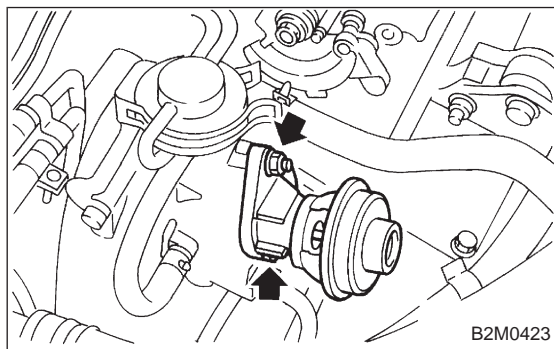

14. EGR Valve

A: REMOVAL AND INSTALLATION

1) Disconnect vacuum hose from EGR valve.

2) Remove bolts which install EGR valve onto intake manifold.

3) Installation is in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

$19 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.9 \pm 0.15 \text{ kg}\cdot\text{m}$, $13.7 \pm 1.1 \text{ ft}\cdot\text{lb}$)