


## 8. Rear Oxygen Sensor

### A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Disconnect connector from rear oxygen sensor.

- 3) Apply SUBARU CRC or its equivalent to threaded portion of rear oxygen sensor, and leave it for one minute or more.


**SUBARU CRC (Part No. 004301003)**

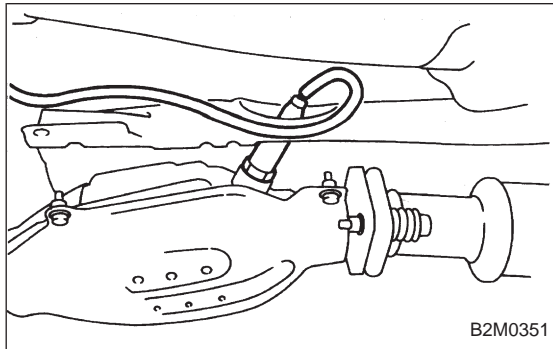

- 4) Remove rear oxygen sensor.

#### CAUTION:

**When removing rear oxygen sensor, do not force rear oxygen sensor especially when exhaust pipe is cold, otherwise it will damage exhaust pipe.**

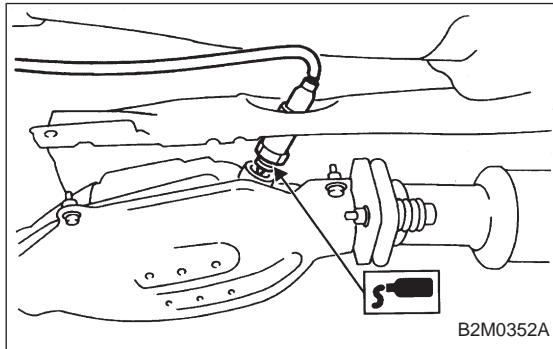

### B: INSTALLATION


- 1) Before installing rear oxygen sensor, apply anti-seize compound only to threaded portion of rear oxygen sensor to make the next removal easier.

#### **Anti-seize compound:**

**SS-30 by JET LUBE**

#### CAUTION:

**Never apply anti-seize compound to protector of rear oxygen sensor.**

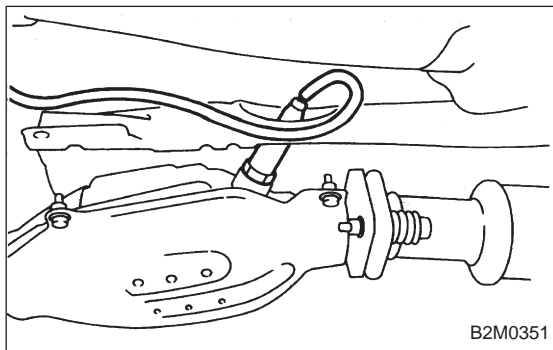

- 2) Install rear oxygen sensor.

#### **Tightening torque:**

**$21 \pm 3$  N·m ( $2.1 \pm 0.3$  kg·m,  $15.2 \pm 2.2$  ft·lb)**

- 3) Connect connector of rear oxygen sensor.
- 4) Lower the vehicle.